


Step 1. Attach extrusions to base using four hex bolts.



Step 3. Slide in sintra side panels.



Step 2. Attach support column to base using two **short** thumb knobs; install gusset caps.

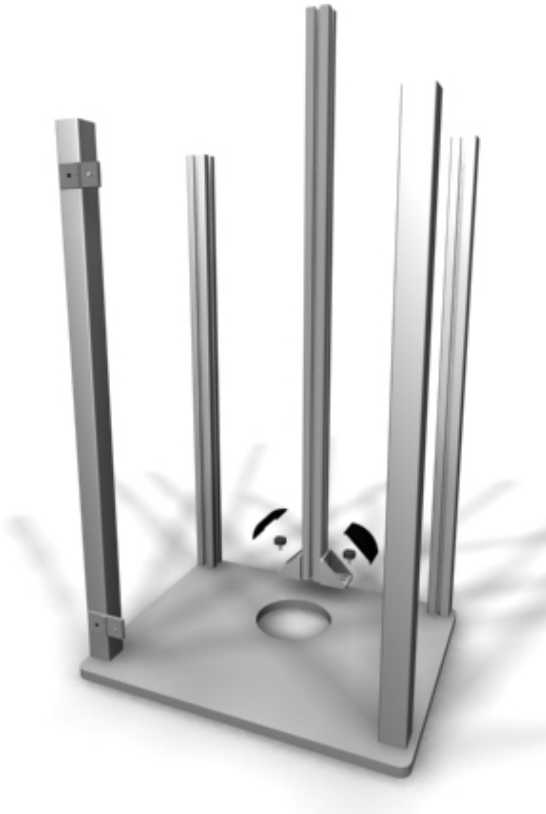

Step 4. Attach counter top to extrusions using four hex bolts.



Step 5. Attach door to hinges.



Step 7. Attach plex wings; tighten thumb knobs.



Step 6. Attach upper column; tighten thumb knobs.

