



**Step 1.** Attach legs to base using four M12 bolts. Tighten w/ 8mm hex key. (**do not over tighten**)

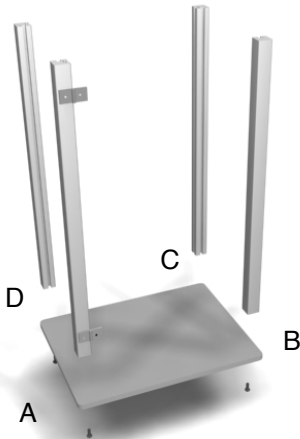

**Step 2.** Insert infill panels.



**Step 3.** Attach top using four M12 bolts. Tighten w/ 8mm hex key. (**do not over tighten**)

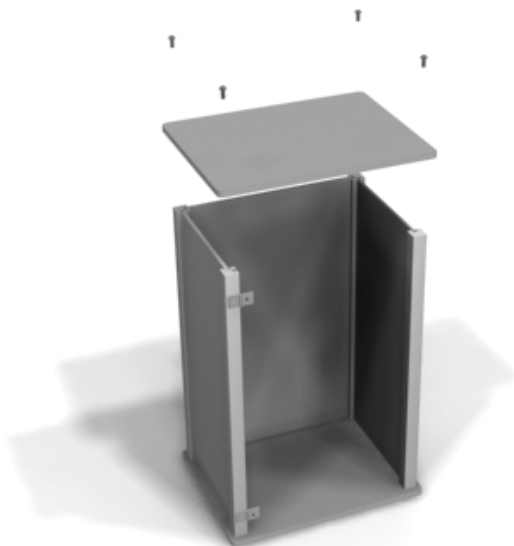

**Step 4.** Attach cabinet door using 1/4"-20 x 1/2" button head cap screws. Tighten w/ 5/32" hex key. (**do not over tighten**)

