


Tension Fabric Case-to-Counter Assembly Instructions

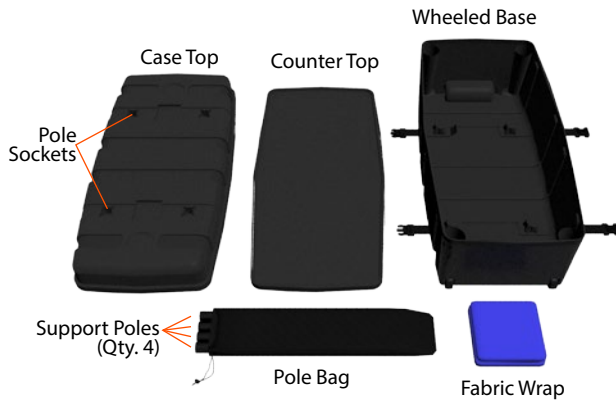

1. Remove and inspect the contents of the case.

2. Flip wheeled base over on a clean floor. Insert each support pole into its corresponding socket. **Make sure the poles are fully seated in their sockets.**

Tip: To make insertion easier, push down while twisting the pole.



3. Mount case top onto the poles. **Make sure the poles are fully seated in the top sockets.**

Tip: To make pole insertion easier, push down on the inside of the case while pulling up on the pole.



4. Begin to pull graphic over case. Center zipper on back of counter. Connect velcro straps.*

Note: At this stage, the graphic will be installed UPSIDE-DOWN.

5. Carefully flip the counter over.



6. Pull graphic all the way over the counter and connect velcro straps.

*Note: DO NOT pull velcro too tightly.***

If the sidewalls bend inward, the counter top will not fit properly.

7. Install the counter top, and press down gently.

If you find your top is not level, make sure all poles are fully seated in the top and bottom sockets (See steps 2 and 3)

* Bottom velcro straps should overlap approximately 5"

**Top velcro straps should overlap approximately 2.5"