




Table Top Sneeze Guard with Side Feet Assembly Instructions

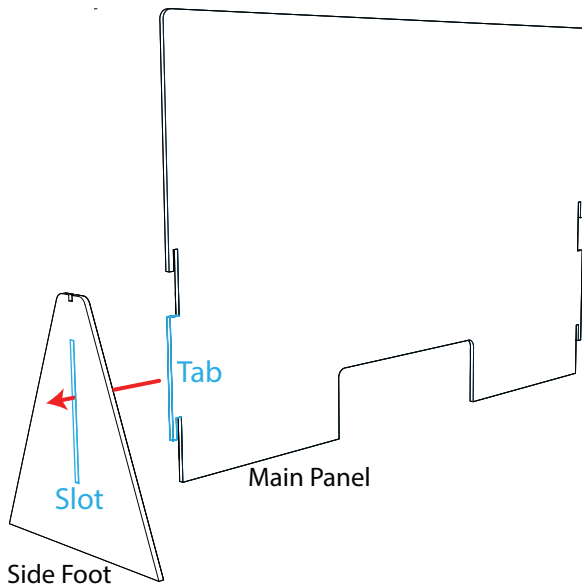


1. Attach one side foot to the main panel by inserting the tab through the slot.

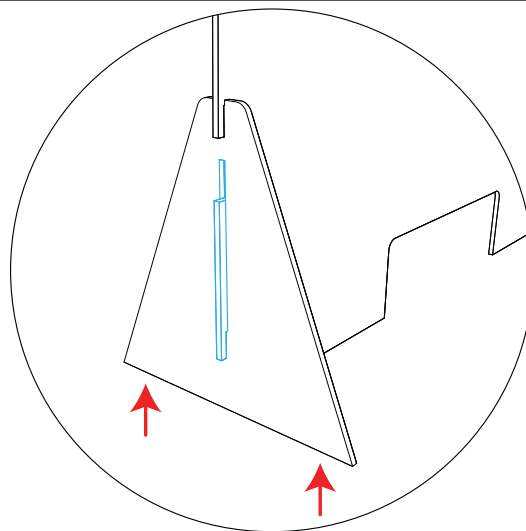


2. Slide the side foot up until it's fully seated. The bottom edge of the side foot will be even with the bottom edge of the main panel.

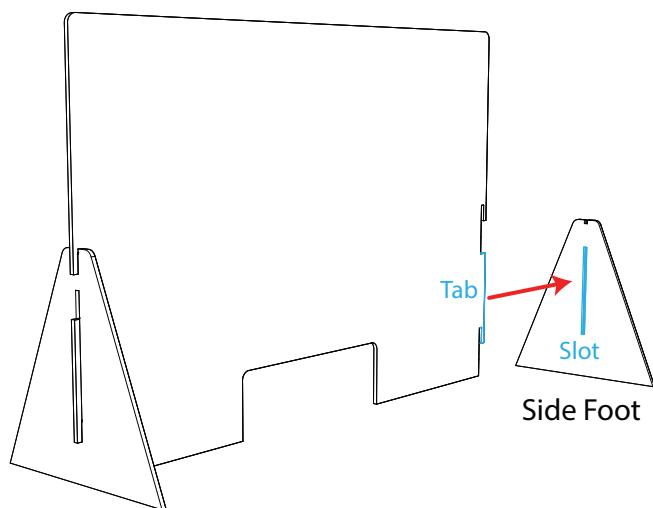

3. Repeat for the second side foot.

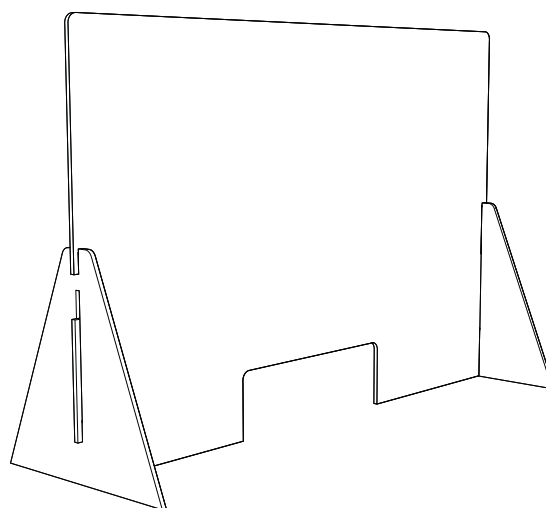


4. Set the sneeze guard in the desired location.

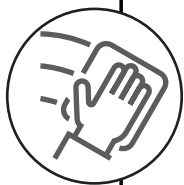

Cleaning Instructions:

Clean the sneeze guard with a clean microfiber cloth and one of the following cleaners:

- Soap and water
- Isopropyl alcohol (diluted to 30% strength)
- Hydrogen peroxide 28%, isopropyl alcohol, soap solution

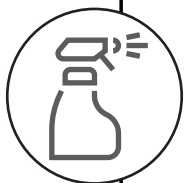

DO NOT USE disinfectants containing hydroxides, dimethyl benzyl or ethyl ammonium chloride, ethylenediamines, and hypochlorite.

These unapproved cleaners will damage or crack the polycarbonate sheets.

A more detailed list of compatible and incompatible cleaners is available on our website.